


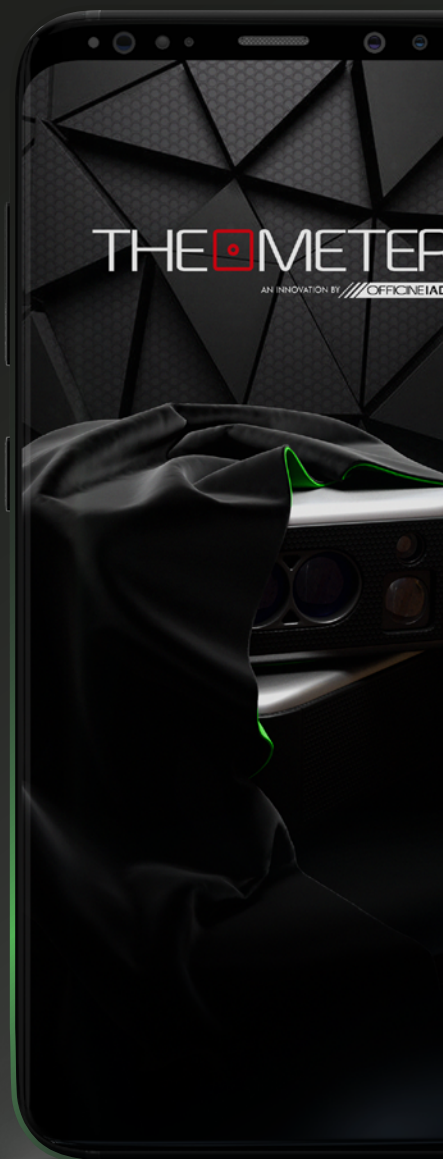

# THE MODES: DISTANCE METER REAL-TIME

GUIDE




INTRODUCTION ..... Pag. 3

 CONTROLLER ..... Pag. 4

 OPTIONS ..... Pag. 5

 FASTPAD ..... Pag. 6

 SCAN ..... Pag. 7



TIP



ADVICE

## INTRODUCTION

Welcome to the **Rangefinder** and **Real-Time Mode**, we will illustrate all the functionalities; alternatively you can also watch our video tutorials of the modes, you can find them on our youtube channel or by scanning the QR code on the right!

YouTube





SCAN ME!



## Rangefinder and Real-Time Mode

With this modes, your **CUBE PRO** takes measurements of any distance in real time in a single or sequential way

 
To start, turn on your **CUBE PRO**, holding down the button A  until the LED turns green, then click  on the App


Switch to Controller 🎮 screen and select the Rangefinder 📐 or Real-Time 🕒 by clicking on **Mode:**








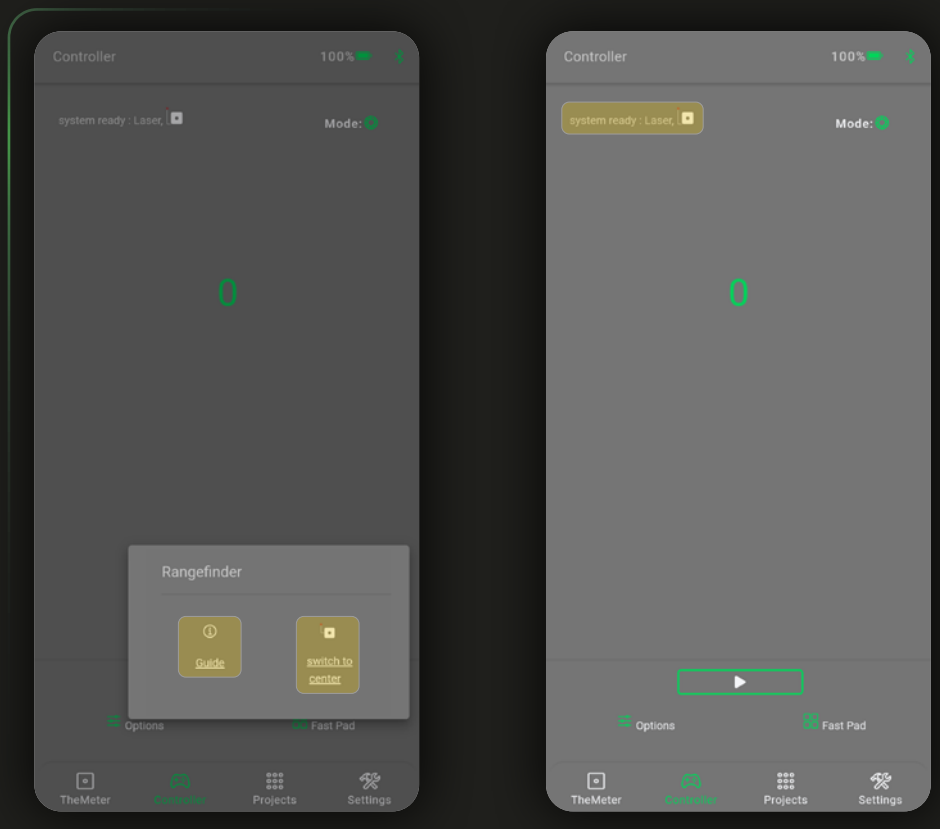
The button **Mode:** indicates the last mode used; at startup of the app you will always be in the automatic mode
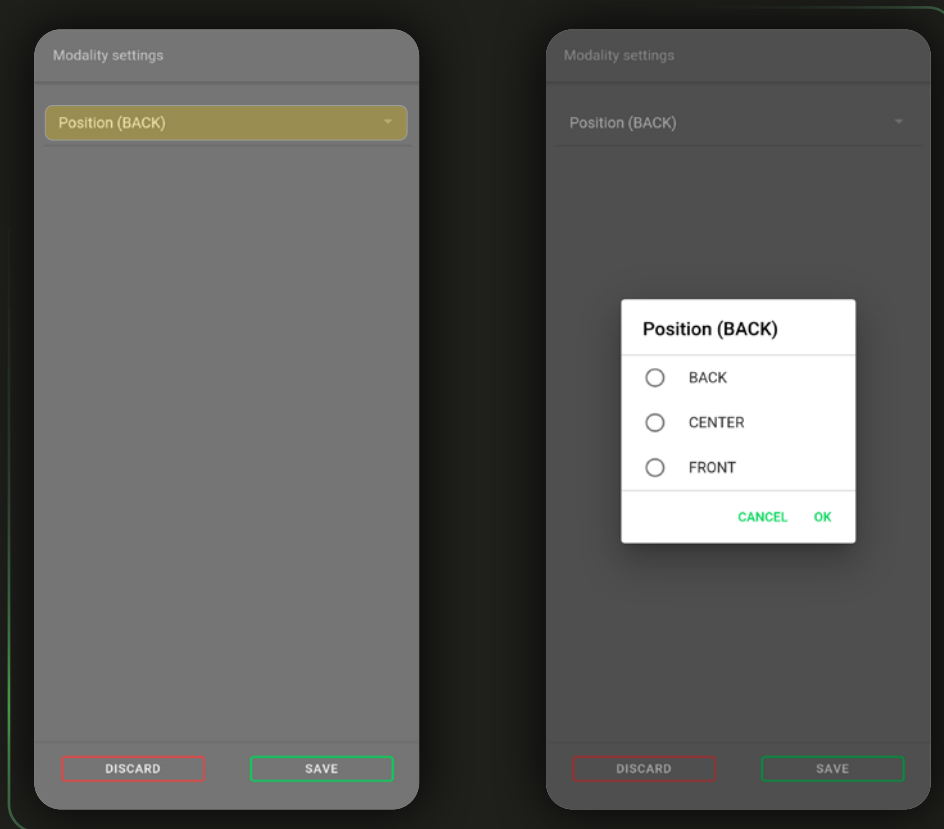
## OPTIONS

In Options  you can set the reference point for calculating the distance between the back limit, center, or front limit of the tool, depending on your needs








In Fast Pad  you will find the link to the Guide  of the currently active mode, and switch to center , front , back  moving the reference point for calculating the distance to the specified location





You can find out the position of the reference point via the indication in the upper left-hand corner that indicate the currently setting


SCAN 

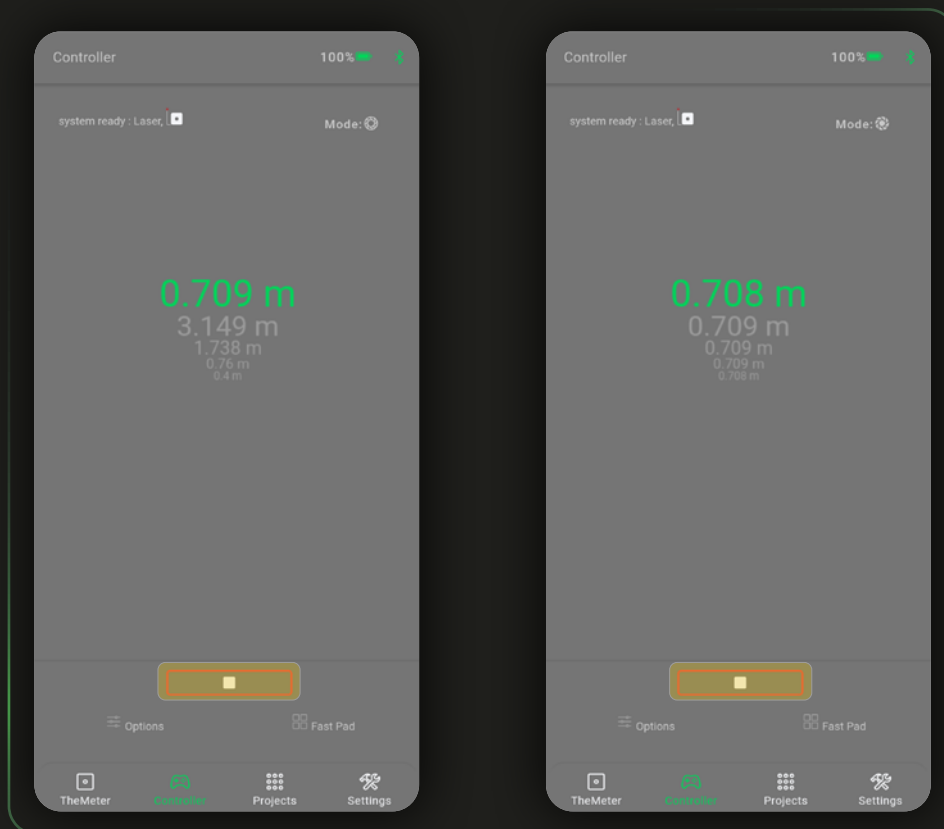
To activate the modes click the button  : selected the Rangefinder  then click the B button  of your **CUBE PRO** to take measurements. In the mode Real-Time  the device records the distance continuously and autonomously



With both modes active, the last five measurements are displayed on the screen. To stop the measurements and return to the Controller  screen click the 


SCAN 

To get more accurate measurements place the top of the device against a surface, to reduce its movement while pressing the B button  to capture the measurement

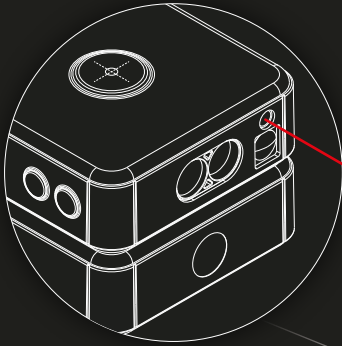

Real-Time mode makes it easier for you to make measurements in contexts in which you don't have the opportunity to interact easily with your **CUBE<sub>PRO</sub>** once placed



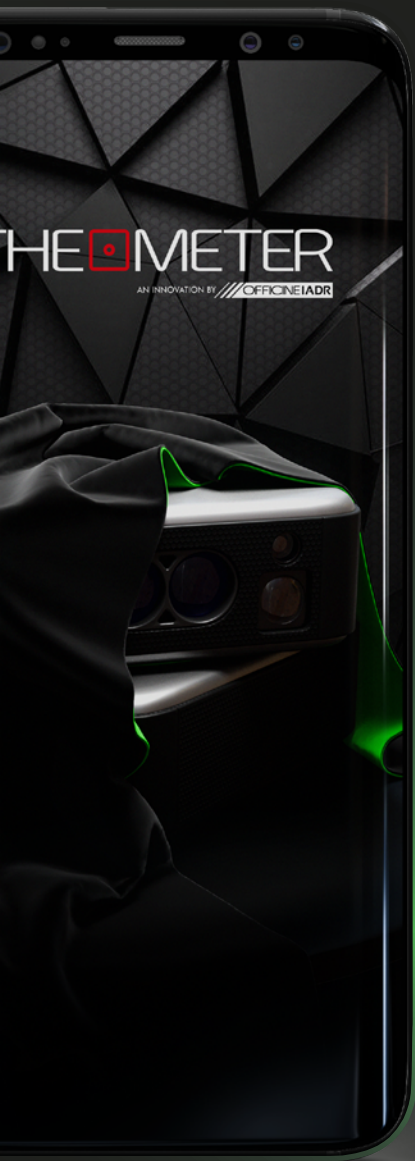

Images used are for illustration purposes only, may differ from reality  
Some features are not available in all regions.

© 2021 Officine IADR SRL

All rights reserved. Designed by Officine IADR printed in Italy